PREMIER®

MANUAL DE INSTRUCCIONES
PREMIER DELTA TABLET (7”)
TAB-5075-8G

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

INSTRUCCIONES DE SEGURIDAD 2
DESCRIPCIÓN 2
CONFIGURACIÓN 4
INSTALAR APLICACIONES 8
ÍCONOS EN PANTALLA 9

PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

⚠ INSTRUCCIONES DE SEGURIDAD

- No coloque la tableta en lugares calientes, con polvo o humedad, y especialmente en el verano, no lo deje en el carro con las ventanas cerradas.
- Evite que la tableta se golpee.
- Se recomienda utilizar un volumen apropiado para proteger su audición.
- No utilice la tableta mientras conduce.
- Recuerde utilizar el cargador y los accesorios que corresponden a esta unidad.
- Cargue la batería tan pronto como la tableta muestre signos de debilidad y el indicador de batería en pantalla muestre que debe hacerlo.

DESCRIPCIÓN

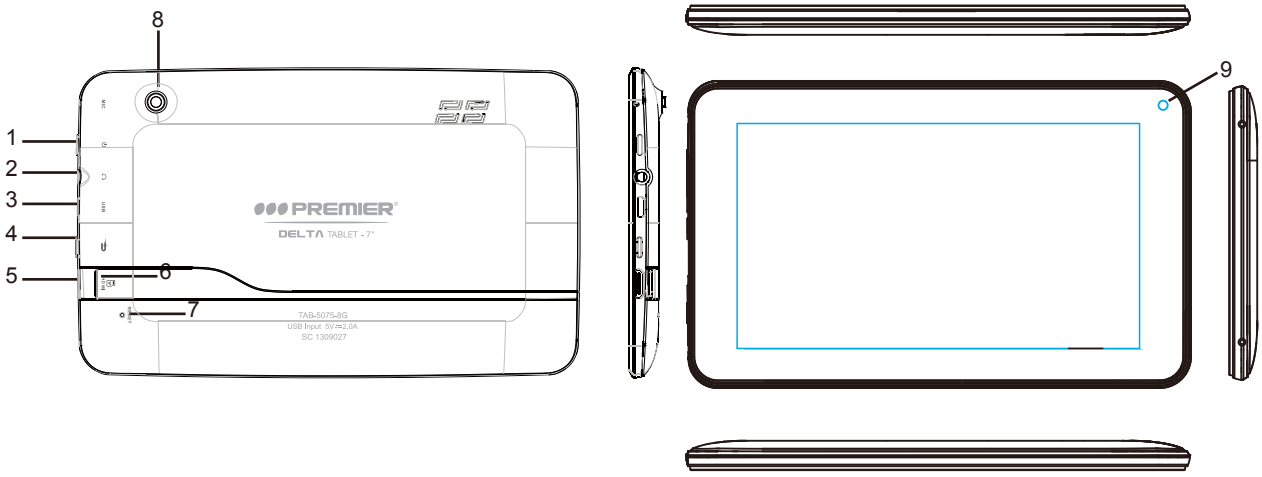

Interruptor de potencia

1. Potencia 2. Conector de audiófonos 3. USB 4. ESC 5. HDMI
6. Tarjeta Micro SD/TF 7. Restaurar 8. Cámara Posterior 9. Cámara Frontal

ENCENDER/APAGAR

Presione este botón para encender y apagar la tableta. Puede tomar un minuto al encender para que la tableta cargue la interface.

INTERFACE PRINCIPAL

Cuando encienda la tableta, la pantalla mostrará la interface principal con algunos íconos en pantalla.

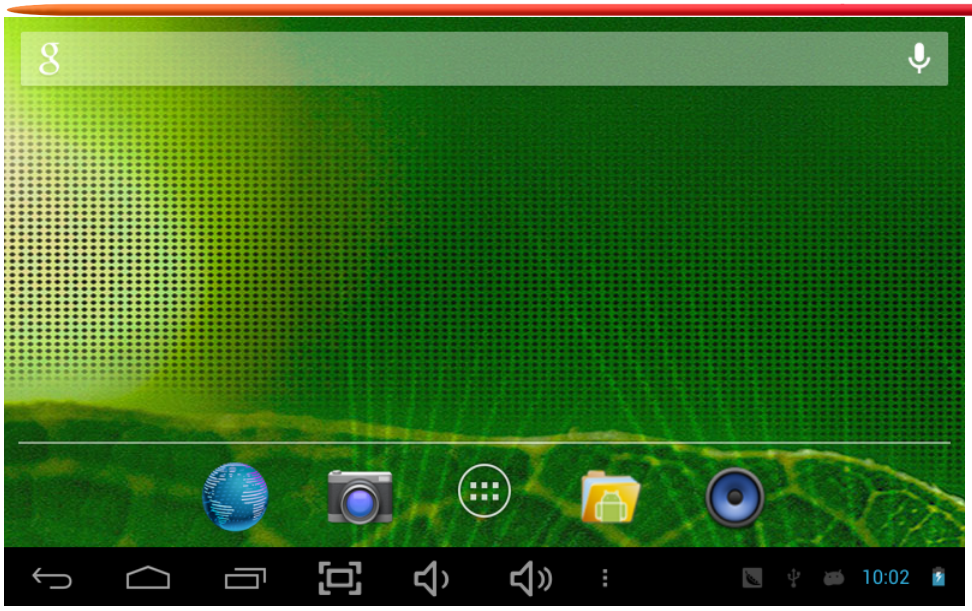

MODO DE ESPERA
Para desbloquear la pantalla presione el icono en forma de candado.

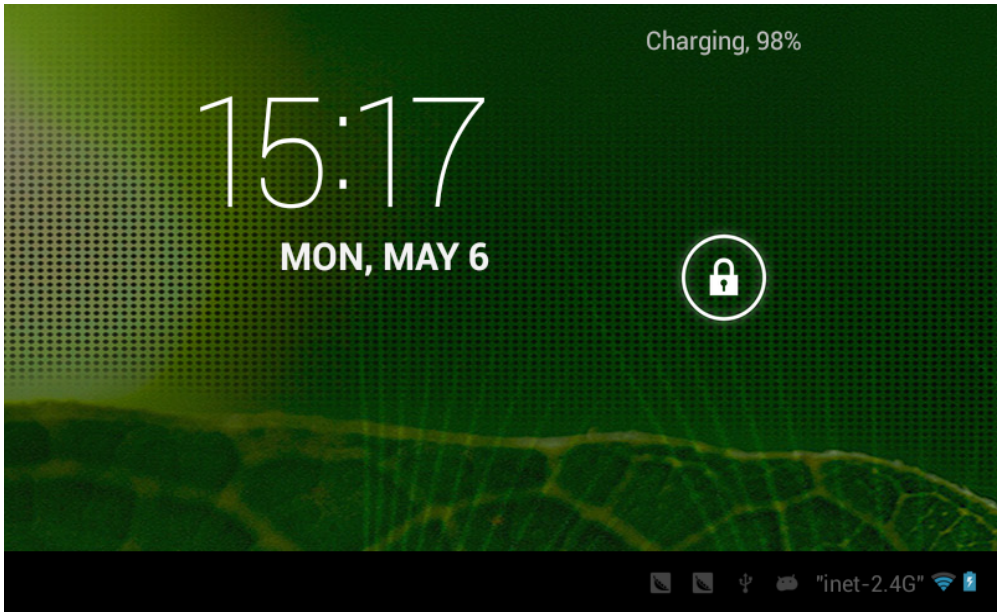

CONFIGURACIÓN DEL SISTEMA

En el escritorio, presione el botón de menú y seleccione el ícono de configuración.

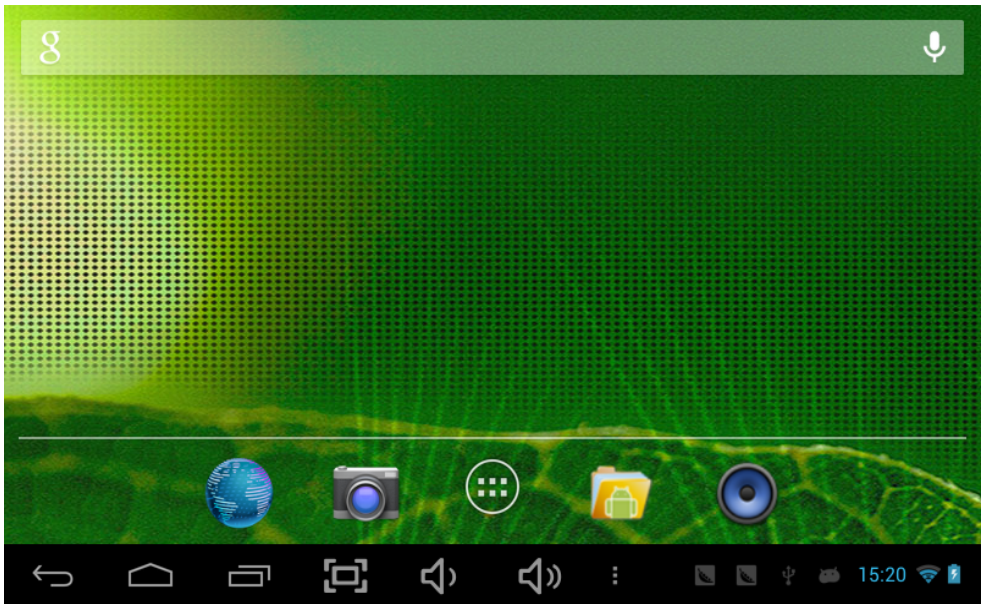

CONFIGURACIÓN

CONEXIÓN A LA RED

Presione la opción de Wi-Fi para hacer el ajuste de conexión a la red. La unidad buscará automáticamente las redes disponibles para conectarse.

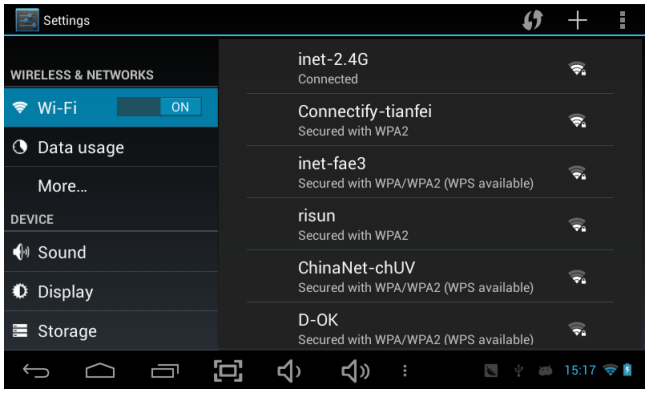

DATOS

Para observar el flujo de los datos.

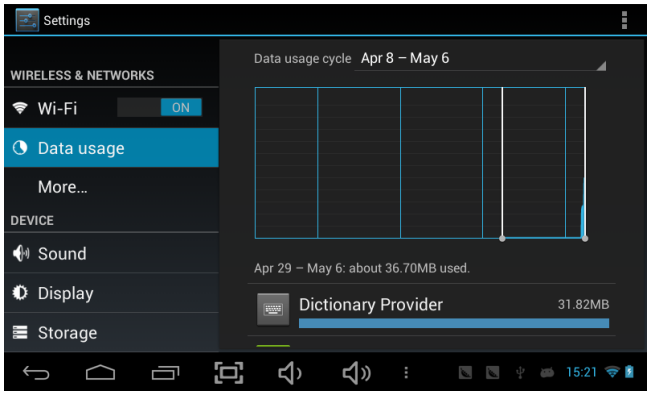

MÁS

Aquí puede tener más información acerca de las opciones de Bluetooth, modo de vuelo e información de soporte 3G.

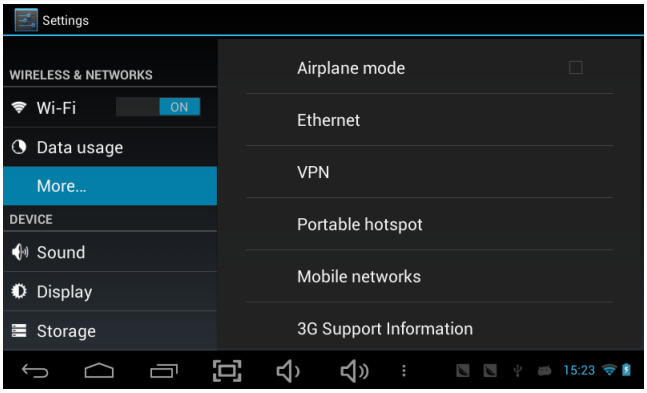

SONIDO

Utilice esta función para hacer ajustes al sonido de la tableta.

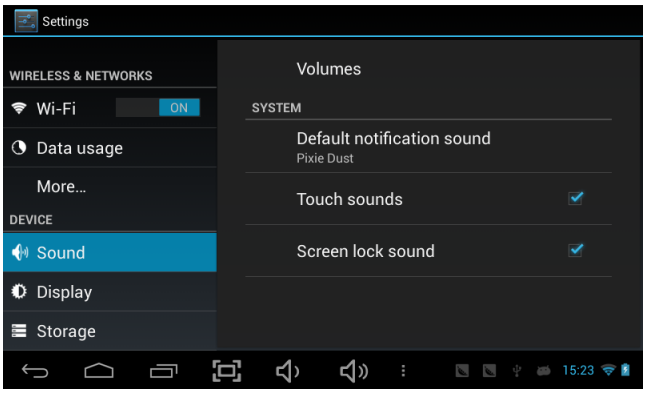

DISPLAY

Haga ajustes al brillo, fondo de pantalla, tamaño de fuente, etc.

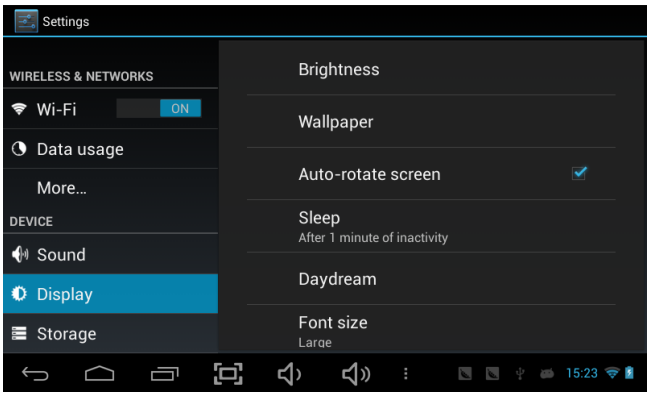

ALMACENAMIENTO

Para verificar el estado de memoria de la tableta y de la micro-tarjeta SD

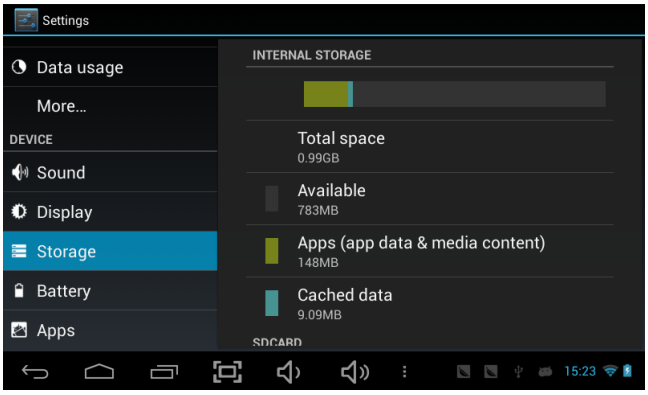

BATERÍA
Verifique la carga de la batería.

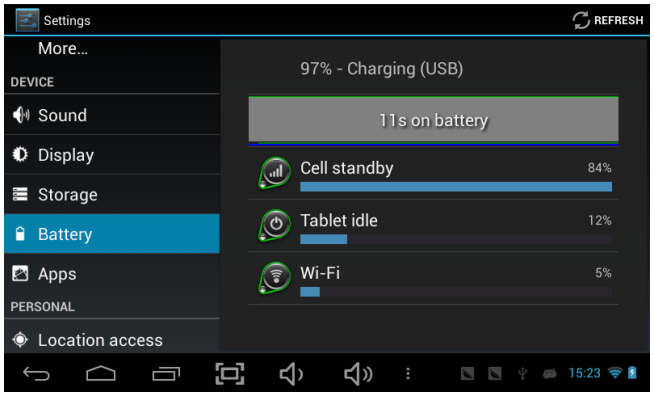

CUENTA Y SINCRONIZACION
Cree su cuenta. Después de conectarse a la red Wi-Fi, el sistema de e-mail sincroniza su cuenta con el dispositivo. Los emails se descargan automáticamente al dispositivo.

SERVICIO DE UBICACIÓN
El servicio de ubicación de Google permite que las aplicaciones utilicen datos de fuentes como Wi-Fi y redes móviles para determinar la ubicación aproximada.

APLICACIONES
Usted puede descargar y administrar sus aplicaciones. También puede desinstalar según necesite.

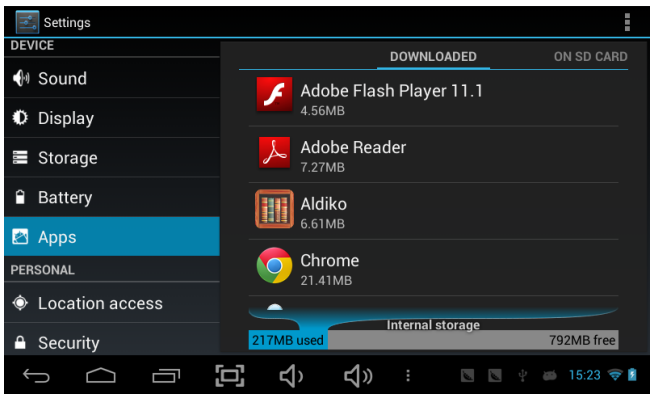

SEGURIDAD
- Bloqueo de pantalla: Proteja la tableta del uso no autorizado creando una contraseña.
- Hacer visible la contraseña: La muestra a medida que la escribe.
- Fuentes desconocidas: Si desea autorizar la instalación de un mercado no conocido. Presione Fuentes Desconocidas y OK.
- Instalación desde Tarjeta SD: Instale certificados encriptados desde la tarjeta.

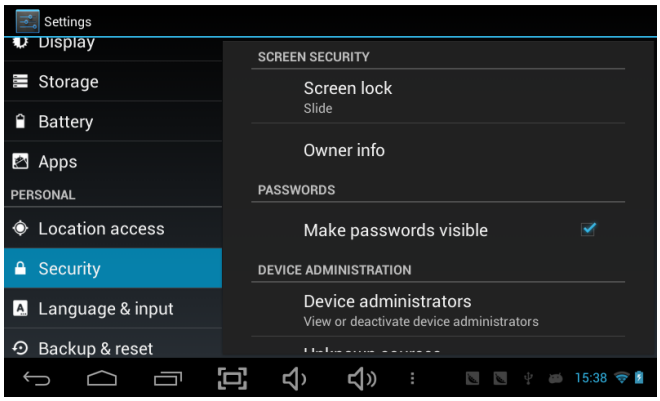

IDIOMA Y MÉTODO DE ENTRADA

Idioma: Elija el idioma de su preferencia.
Teclado y método de entrada: Cambie el teclado y la forma de introducir los caracteres.

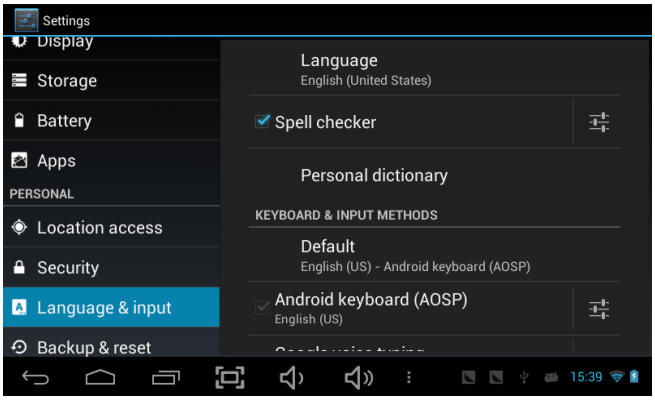

BACKUP Y RESTAURAR

Haga un backup de la información o restaure el sistema a la configuración de fábrica.

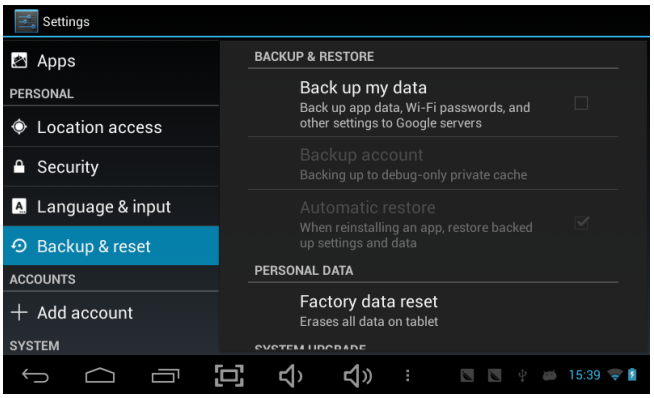

FECHA Y HORA

Configure estos datos.

ACCESIBILIDAD

Diferentes funciones para gestos, tamaño de texto, giro de imagen, etc.

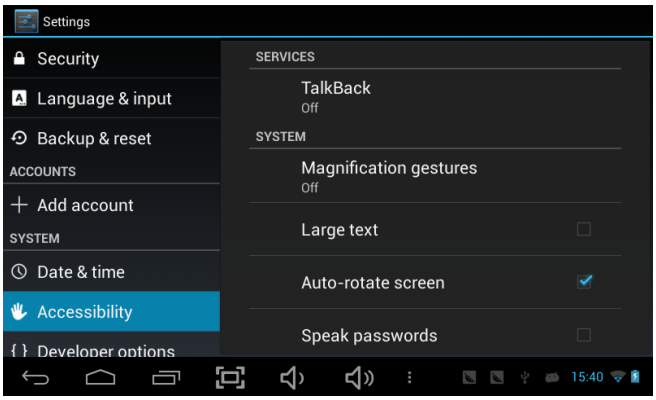

OPCIONES DEL DESARROLLADOR

Ajuste las opciones para el desarrollo de aplicaciones.

ACERCA DE LA TABLETA

Aquí encuentra información legal, de estado, etc.

CONEXIÓN USB

Conecte la tableta al computador con un cable USB. La unidad mostrará en la esquina inferior derecha la conexión.

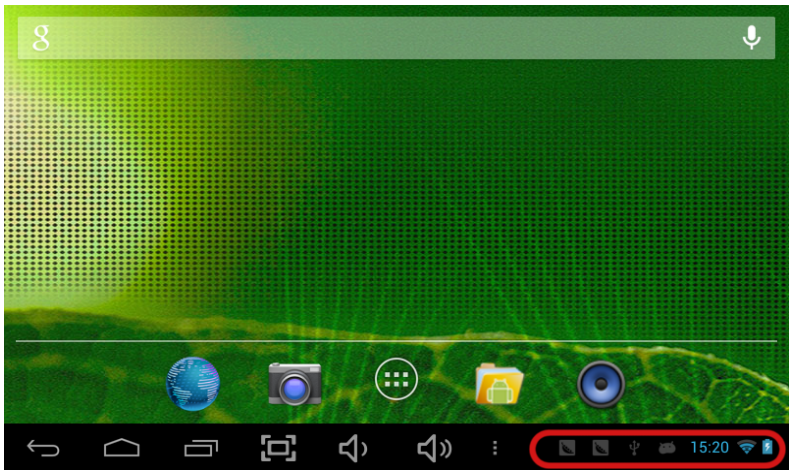

Presione Conexión USB y elija Activar Almacenamiento USB. Este dispositivo es reconocido en el Explorador del computador. Ahora puede utilizarlo como almacenamiento externo.

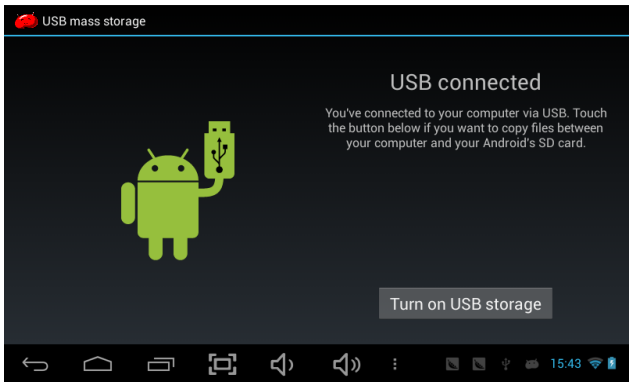
USB mass storage
USB connected
You've connected to your computer via USB. Touch the button below if you want to copy files between your computer and your Android's SD card.
Turn on USB storage
15:43

Al terminar, presione “Turn on USB Storage” (Activar almacenamiento USB) para retirar la tableta.

INSTALAR APLICACIONES

MÉTODO 1

1. Conecte el dispositivo al internet.
2. Corra “Getjar” y busque las aplicaciones que desea instalar.
3. Siga las instrucciones en pantalla.

MÉTODO 2

1. En el computador, busque la aplicación que desea instalar.
2. Descargue la aplicación al computador (recuerde que el formato es .apk).
3. Conecte la tableta al computador. Copie y pegue la aplicación a la tableta.
4. Una vez en la tableta, siga las instrucciones de instalación.

Nota
Usted debe ser mayor de edad para poder hacer las descargas de las aplicaciones. En caso de que no lo sea, debe solicitar autorización y ayuda de un adulto.

ÍCONOS EN PANTALLA

Presione e ícono de escritorio para ir a la interface principal.

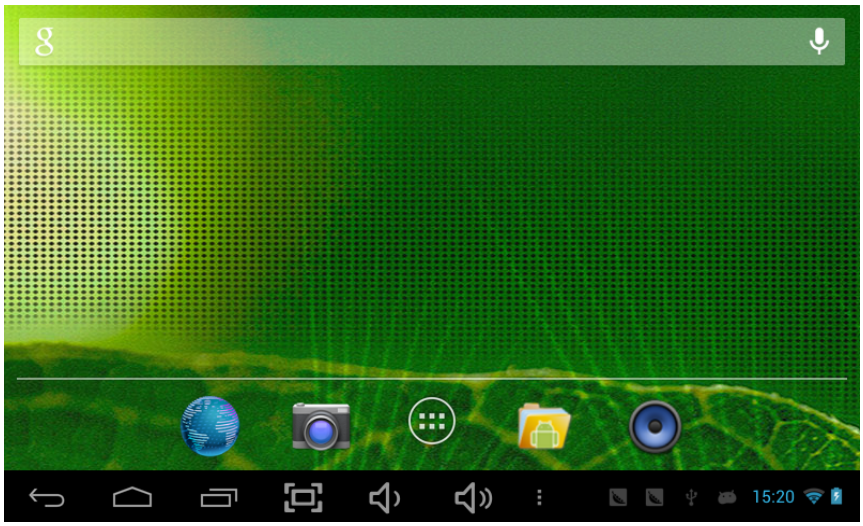

ACCESOS DIRECTOS

Presione de manera prolongada el ícono de la aplicación para ponerla en el escritorio.

WIDGETS

Presione los Widgets que desea colocar en el escritorio.

FONDO DE PANTALLA

Presione de manera prolongada este ícono para elegir el fondo de pantalla.

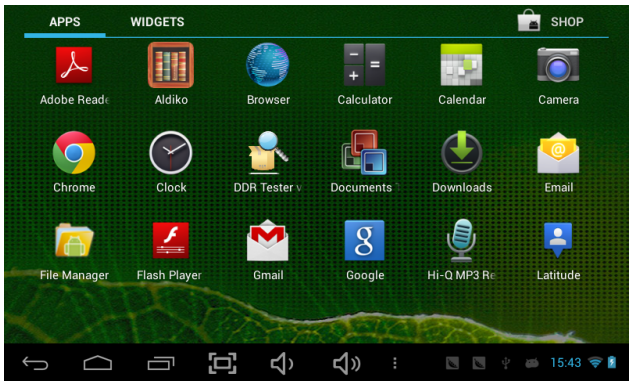

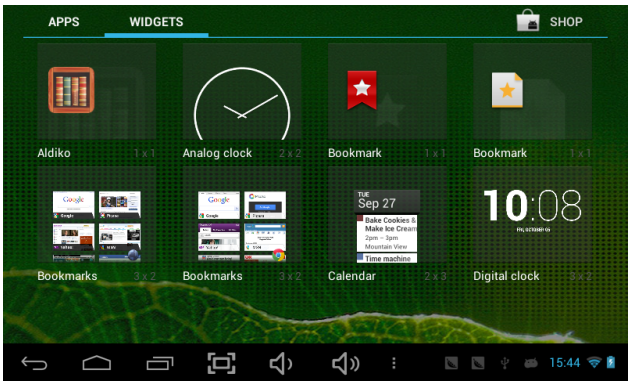

Basic Specification

Spec		Detail		Accessories
OS	Android 4.2	Camera	Front0.3Mega Pixel, Back2.0 Mega Pixel	5V2A charger, User Manual, USB cable, OTG cable, Earphone, Carry case
Screen	7" 5 Points Capacitive Touch Screen. 800*480 16:9 (G+P)	G-sensor	all gravity induction	
CPU	A20 Dual core Cortex A7@ 1.0GHz	HDMI port	support	
RAM	DDR3 512MB	language	Support multi language	PACKAGE
HDD	8GB FLASH	Battery	3.7V 3000MAH	1: Product Size: 192*117*11 mm
Wifi and 3G	Wifi: 802.11b/g/n Support extra 3G	VIDEO	1080P	
Bluetooth2.0	no support	flash10.1	support	
GPS	no support	Other	support 3D games	
Applications	MSN, Skype, Gmail, Apps from Android Market	Audio	Support MP3, WMA, OGG, AAC, MA4, FLAC, APE, 3GP, WAV etc.	
Office Software	Word, Excel, Powerpoint, Pdf, Txt etc.	Video format	Support AVI, RM, RMVB, MKV, WMV, MOV, DAT, VOB, PMP, MPG, 3GP etc.	

PREMIER®

INSTRUCTION MANUAL

PREMIER DELTA TABLET (7”)

TAB-5075-8G

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to ***info@premiermundo.com***

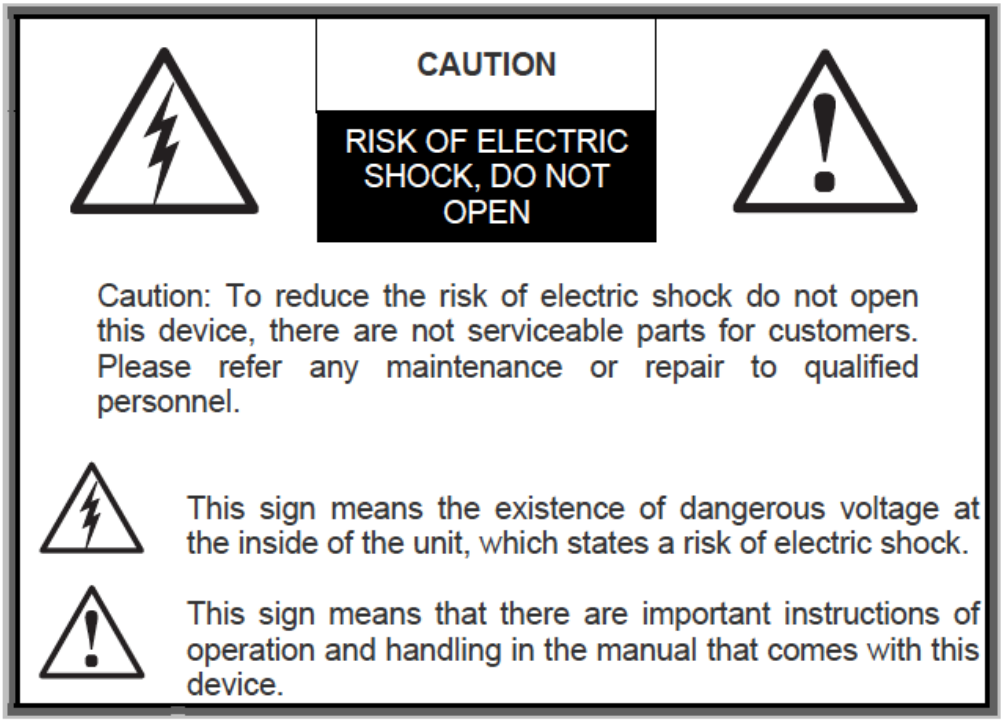
CAUTION
RISK OF ELECTRIC SHOCK, DO NOT OPEN
Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.
This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.
This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

This manual contains important safety precautions and information of correct use. Please be sure to read this manual carefully before use so as to avoid any accidents.

Do not place the product in hot, wet or dusty environment, especially in summer, do not leave the product inside a car with all windows closed.
Avoid dropping, impacting or shaking the product violently, otherwise it may cause damages or malfunctions. Select a proper volume to avoid ear problem when using earphones.
Do not cross the road or drive vehicles, using headphones to avoid traffic accidents.
Be sure to use the provided chargers and accessories in the package.
Be sure to charge the product when the following situations take place,
- The battery icon shows lower or empty.

- Operation keys do not respond properly.
- The device shows on the top right corner.

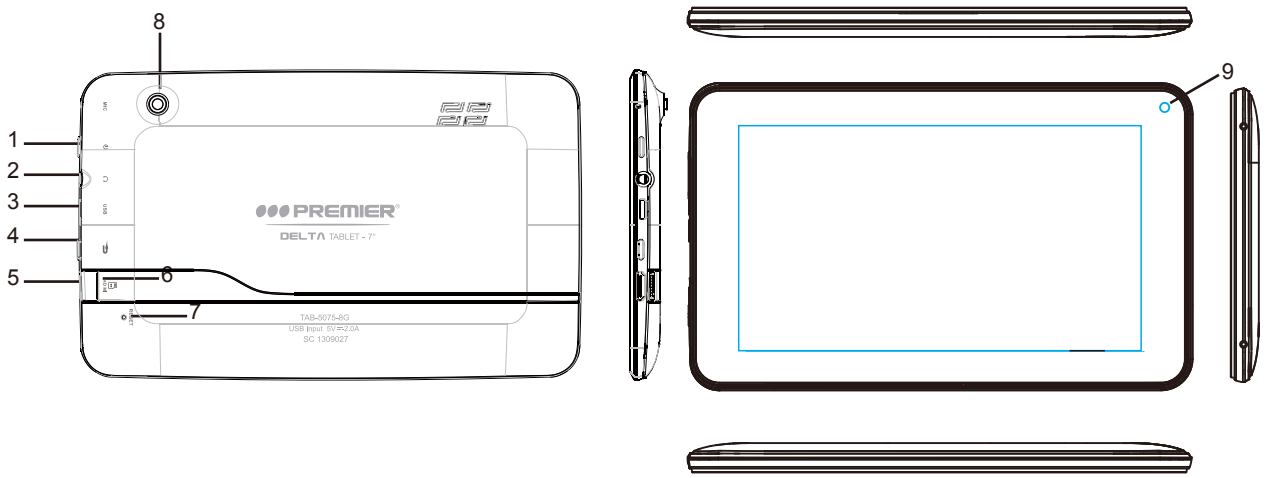

1 POWER 2 EARPHONE 3 USB 4 ESC 5 HDMI 6 TF CARD 7 RESET 8 BACK CAMERA 9 FRONT CAMERA

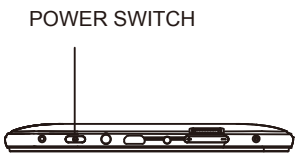

1. Power On/Off

Long press power button to turn on/off the device. It may take a minute to boot the device.
Short press power button to turn on/off the screen.(Standby mode. Refer to 3. below)

2 . Desktop

After turning on the device, desktop displays with shortcut icons and arrow panel at the right side

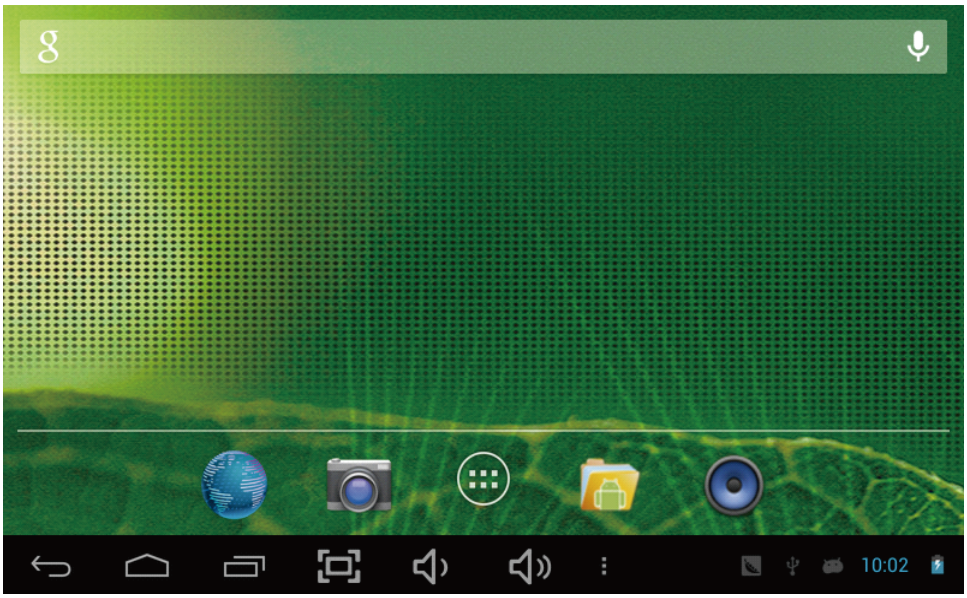

3. Standby mode(Screen off mode) / Unlock the screen

Short press the power button to turn on/off the screen (standby mode on/off).
After standby mode o , slide the lock icon in order to unlock the screen.

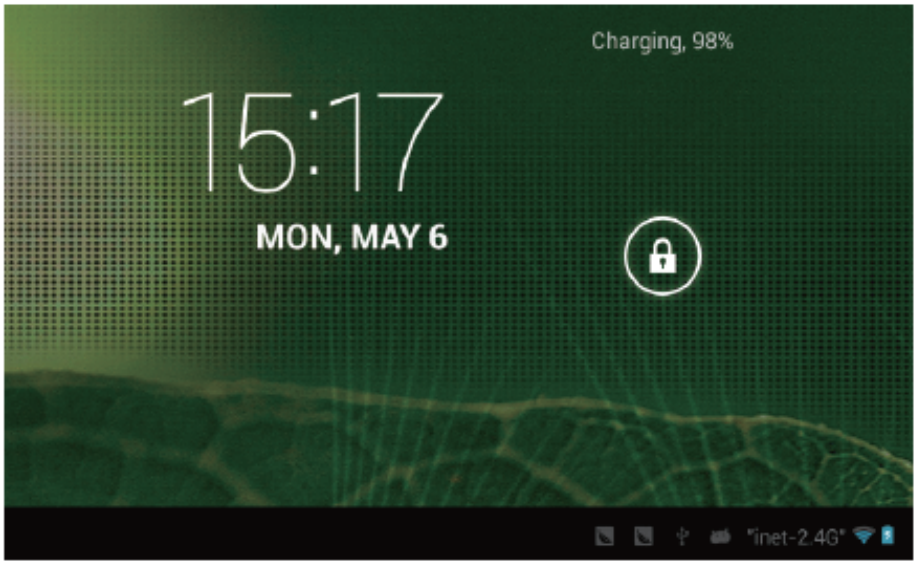

4. System settings

On the desktop, press menu button and select system settings.

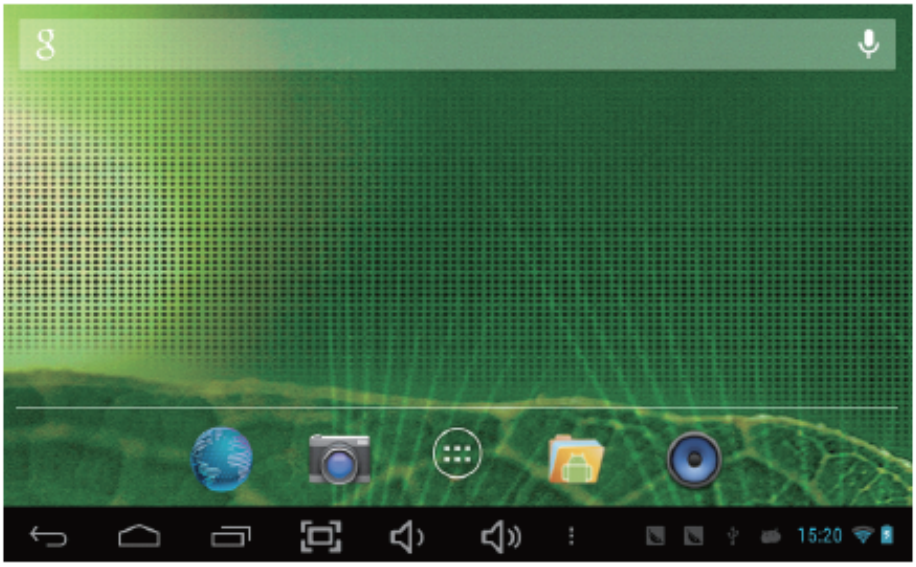

Press System Settings

1.Wireless & networks

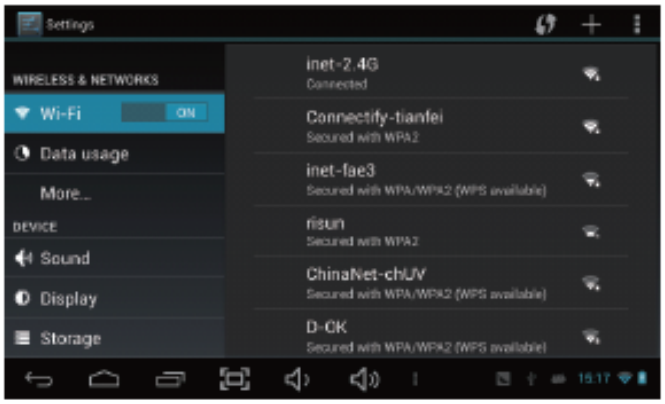

Wi-Fi – Press Wi-Fi to turn on/off Set up each setting as you like. Wi-Fi settings - Press Wi-Fi settings, then the device
will automatically search the available Wi-Fi signals. Select the network
you want to connect with.

2.Data usage

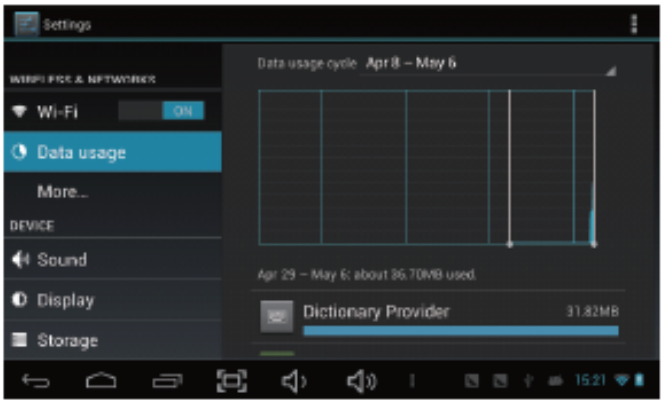

Slide mobile data switch to select open or close the flow usage.

3.More...

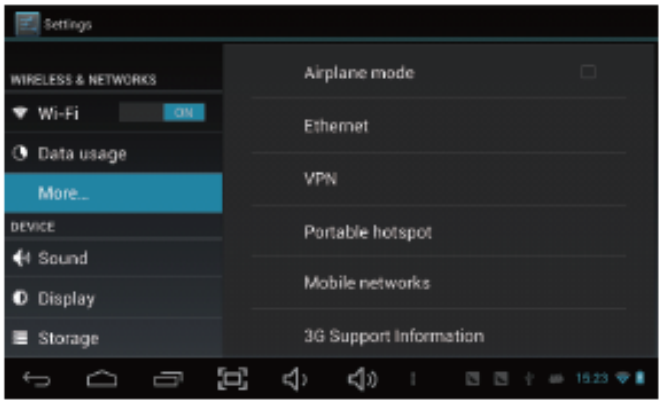

For more information on mobile data and Bluetooth options, Flight mode, Bluetooth sharing, 3G support information

4. Sound

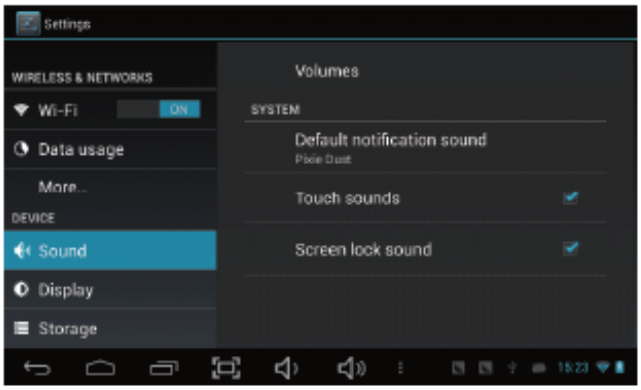

5. Display

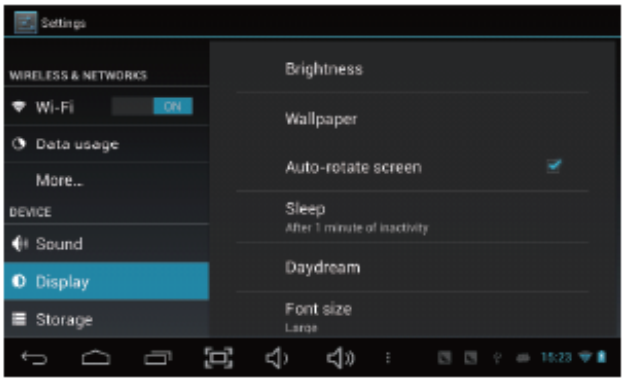

Set up each setting as you like.

6. Storage

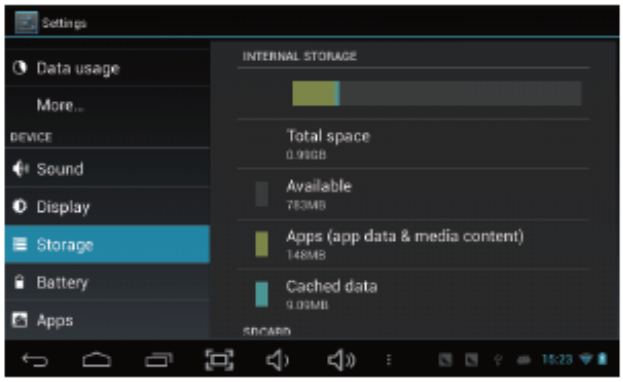

Check device memory and microSD card status.
Unmount SD card – Unmount the SD card for safe removal.

7. Battery

Check battery usage status.

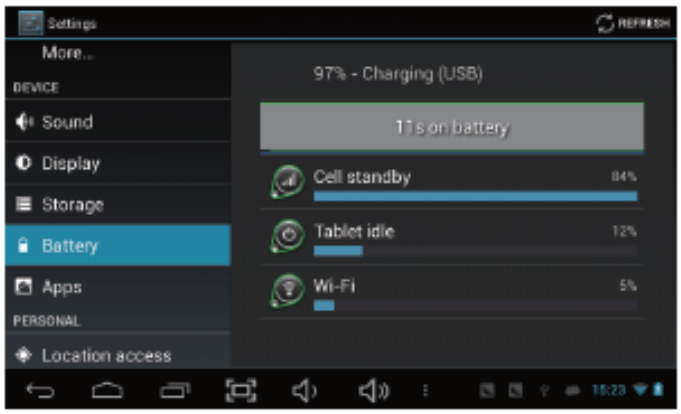

8. Apps

Manage downloaded or running applications.

Downloaded
All installed application are listing.

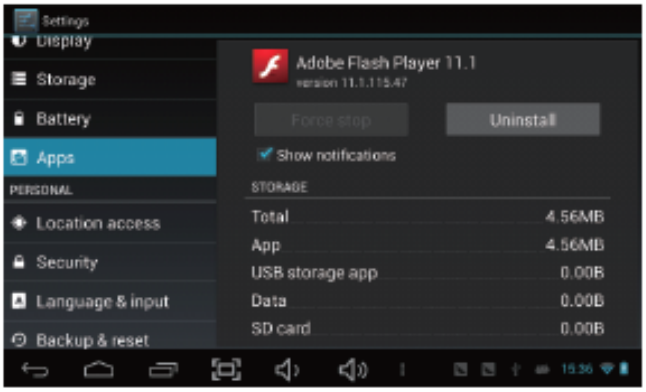

Keep pressing an application to manage.
Press Uninstall to uninstall the selected application.

Running services
View and control currently running services.

9. Account & sync

Create your account. After connecting Wi-Fi network, the e-mailing system synchronizes your account with the device. Emails are automatically downloaded into the device.

10. Location services

Google's location service - Let apps use data from sources such as WiFi and mobile networks to determine your approximate location

11. Security

Screen lock – Protect your device from unauthorized use by creating a personal screen unlock pattern. Make passwords visible – Show password as you type.
Unknown sources - If you want to allow installation of non-Market Applications, Press Unknown sources and presses OK.

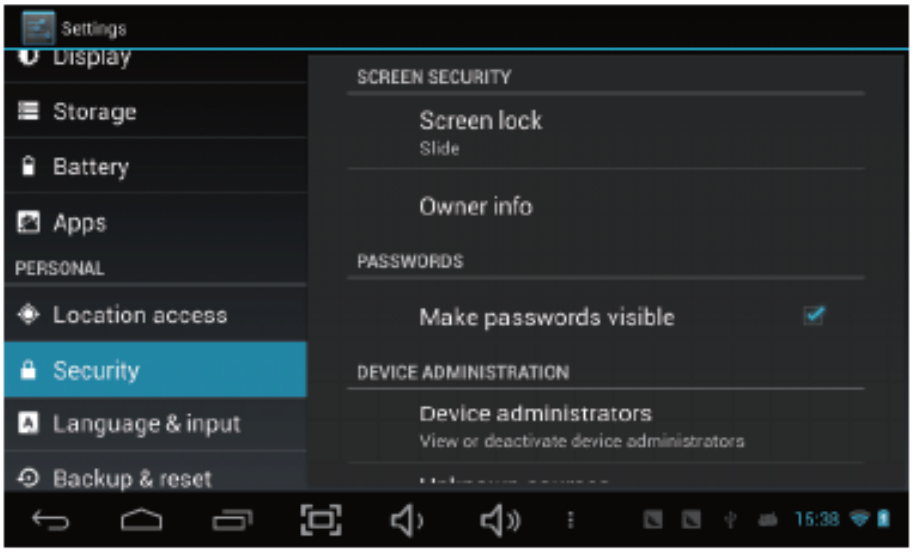

Install from SD card – Install encrypted certi cates from SD card.

12. Language & input

Language – Choose your preferable language.
Keyboard & input method – Change keyboard & keyboard settings.
On Language & input settings, if you need other languages besides English on keyboard, press the relevant keyboard and enter the chosen Keyboard settings, select Keyboards, press the language you need.

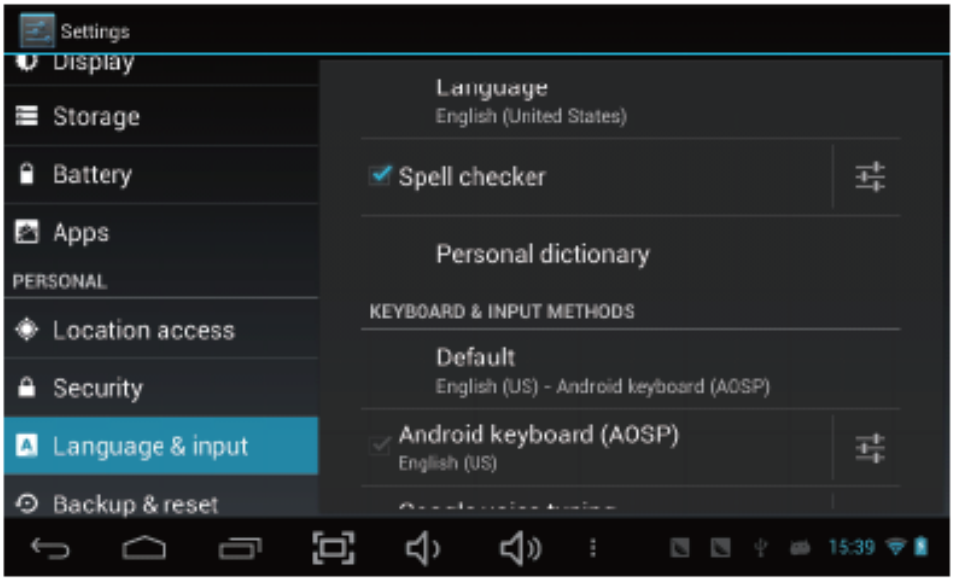

13. Backup &Reset

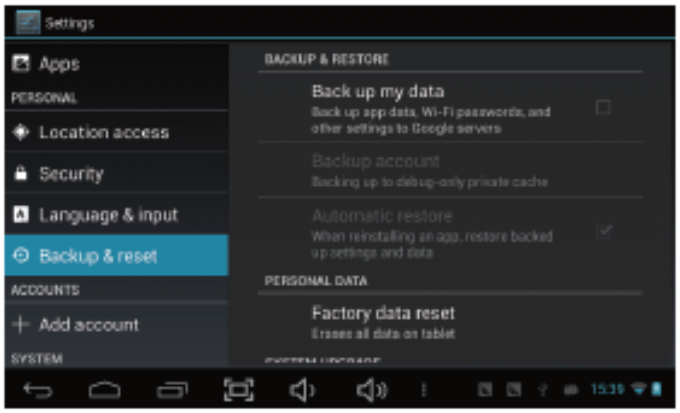

14. Date&time

Set date & time and format

15. Accessibility

Set date & time and format

16. Developer options

Set options for application development

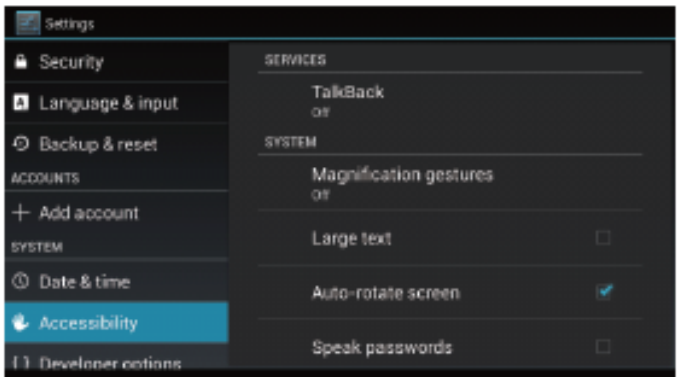

17. About tablet

See status, legal information, ETC

How to connect/disconnect the device with/from the computer

On main desktop, connect the device with the PC,
touch right side of the status bar on the bottom of desktop

Press “USB connected”, select “Turn on USB storage”.
The device is recognized at Explorer of the computer.
Now you can use it as an external storage.

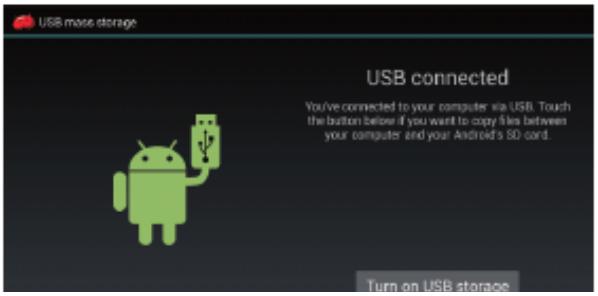
USB mass storage
USB connected
You've connected to your computer via USB. Touch the button below if you want to copy files between your computer and your Android's SD card.
Turn on USB storage

After finishing your work,
Press “Turn on USB storage”to unmount it.

How to install Applications(.apk file) into the device

Method 1.

1. Connect the device with internet. See above [1.Wireless & networks] in order to connect internet.
2. Run "Getjar" and search the applications you want to install.
3. Follow the instruction on the screen for installation.

Method 2.

1. With your computer, search application file(.apk) that you want to install into the device.
2. Download the file(.apk) into your computer.
3. Connect the device with your computer.
   See above [How to connect/disconnect the device with/from the computer.]
4. Copy and paste .apk file into the device and disconnect it from your computer.
5. Run "File browser" and nd .apk le that was copied into the device.
6. Press the file to install and follow the instruction on the screen.

How to make desktop icons

Press the upper right side icon of desktop, the pop-up displays.

Shortcuts

Long press your desired APK icon and put it on the desktop.

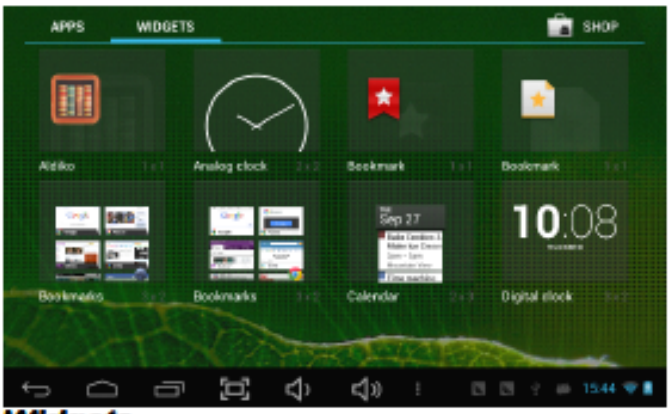

Widgets

Press Widgets and press your desired icon to put it on the desktop.

Wallpaper

Long press the desktop, press Wallpapers and select one of categories of wallpaper.
Select one you desire and press Set wallpaper.

Basic Specification

Spec		Detail		Accessories
OS	Android 4.2	Camera	Front0.3Mega Pixel, Back2.0 Mega Pixel	5V2A charger, User Manual, USB cable, OTG cable,Earphone, Carry case
Screen	7" 5 Points Capacitive Touch Screen. 800*480 16:9 (G+P)	G-sensor	all gravity induction	
CPU	A20 Dual core Cortex A7@ 1.0GHz	HDMI port	support	
RAM	DDR3 512MB	language	Support multi language	PACKAGE
HDD	8GB FLASH	Battery	3.7V 3000MAH	1: Product Size: 192*117*11 mm
Wifi and 3G	Wifi: 802.11b/g/n Support extra 3G	VIDEO	1080P	
Bluetooth2.0	no support	flash10.1	support	
GPS	no support	Other	support 3D games	
Applications	MSN, Skype, Gmail, Apps from Android Market	Audio	Support MP3, WMA, OGG, AAC, MA4, FLAC, APE, 3GP, WAV etc.	
Office Software	Word, Excel, Powerpoint, Pdf, Txt etc.	Video format	Support AVI, RM, RMVB, MKV, WMV, MOV, DAT, VOB, PMP, MPG, 3GP etc.	